


GRANITE SOLUTIONS INSTALLATION ON A BAR OR OVERHANG

In order to accommodate an overhang, the overhang must be dimensionally sound and stable, with no deflections. Corbels should be spaced 24 inches apart, and an angle iron used to support the edge of the overhang. The overhang cannot be more than 12 inches from the cabinet.

Additional supplies needed for this installation:

- angle irons
- corbels

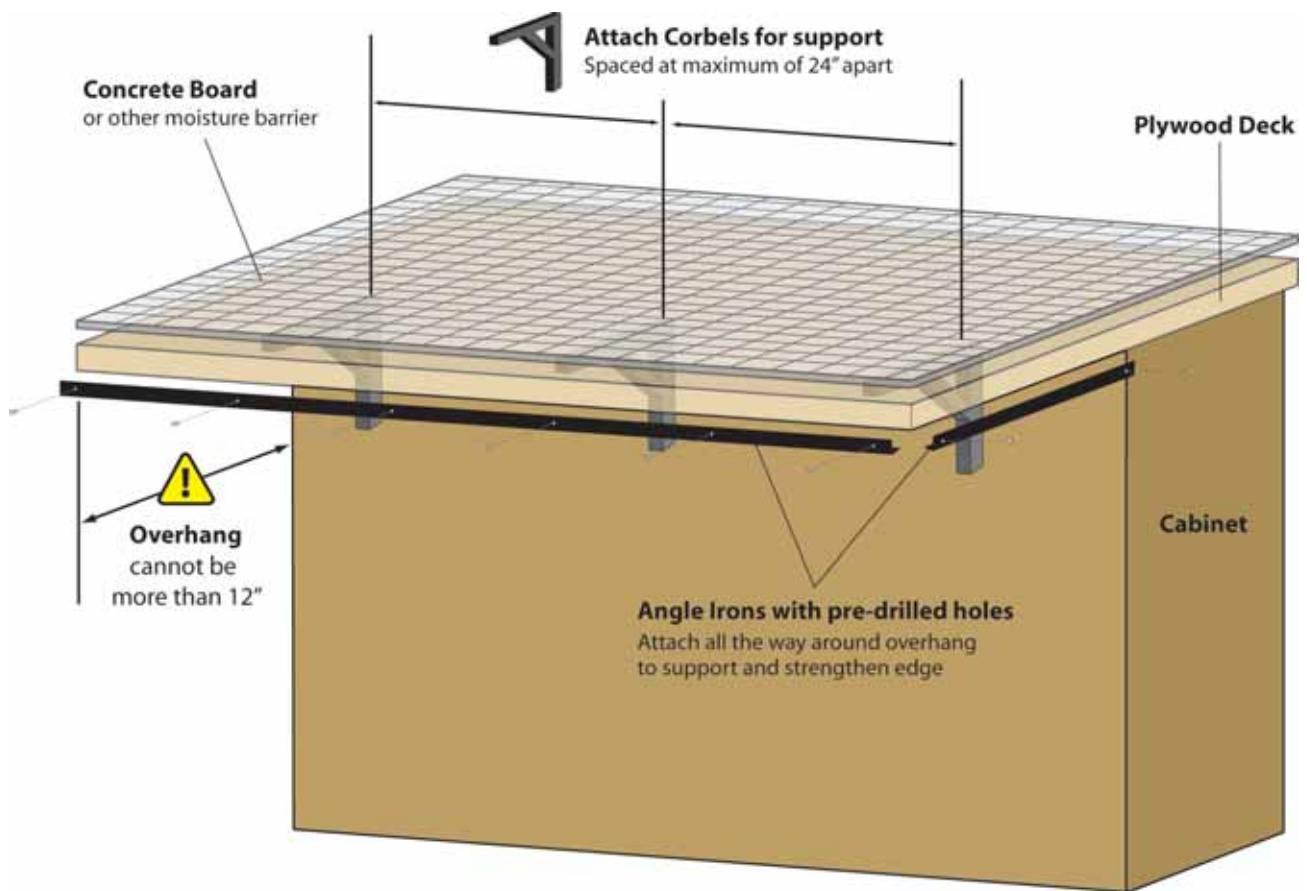

Overhang must be dimensionally stable and structurally sound. Any give or flex can cause the grout to crack.